

2020 Carmel Service Manual

General Information

1. General Information

1.1. General Information

1.1.1. Introduction

1.1.2. Foreword

This manual provides information on the diagnosis, the service procedures, the adjustments, and the specifications for the Vanderhall Carmel.

The technicians who understand the material in this manual and in appropriate Dealer Service Bulletins better serve the vehicle owners.

When this manual refers to a brand name, a part number, or a specific tool, you may use an equivalent product in place of the recommended item. All information, illustrations, and specifications in this manual are based on the latest product information available at the time of publication approval. Vanderhall Motorworks reserves the right to make changes at any time without notice.

1.1.3. Definition of Danger, Warning, Caution, and Note

The diagnosis and repair procedures in a Vanderhall Service Manual contain both general and specific Dangers, Warnings, Cautions, Notes or Important.

Vanderhall is dedicated to the presentation of service information that helps the technician to diagnose and repair the systems necessary for the proper operation of the vehicle; however, certain procedures may present a hazard to the technician if they are not followed in the recommended manner. Dangers, Warnings, Cautions and Notes or Important are elements designed to prevent these hazards, however, not all hazards can be foreseen. This information is placed at strategic locations within the service manual. This information is designed to prevent the following from occurring:

- Serious bodily injury or death to the technician
- Damage to the vehicle
- Unnecessary vehicle repairs
- Unnecessary component replacement
- Improper repair or replacement of vehicle components

1.1.3.1. DANGER Defined

When encountering a DANGER, you will be asked to take a necessary action or not to take a prohibited action. If a DANGER is not heeded, the following consequences may occur:

- Serious bodily injury or death to the technician
- Serious bodily injury or death to other technicians in the workplace area

1.1.3.2. WARNING Defined

When encountering a WARNING, you will be asked to take a necessary action or not to take a prohibited action. If a WARNING is not heeded, the following consequences may occur:

- Serious bodily injury to the technician
- Serious bodily injury to other technicians in the workplace area
- Serious bodily injury to the driver and/or passenger(s) of the vehicle, if the vehicle has been improperly repaired

1.1.3.3. CAUTION Defined

CAUTIONS call special attention to a necessary action or to a prohibited action. If a CAUTION is not heeded, the following consequences may occur:

- Damage to the vehicle
- Unnecessary vehicle repairs
- Unnecessary component replacement
- Improper operation or performance of the system or component under repair
- Damage to any systems or components which are dependent upon the proper operation of the system or component under repair

2020 Carmel Service Manual

General Information

Improper operation or performance of any systems or components which are dependent upon the proper operation or performance of the system or component under repair

Damage to fasteners, basic tools, or special tools

The leakage of coolant, lubricant, or other vital fluids

1.1.3.4. NOTE or IMPORTANT Defined

NOTE and IMPORTANT statements emphasize a necessary characteristic of a diagnostic or repair procedure. NOTE or IMPORTANT statements are designed to do the following:

Clarify a procedure

Present additional information for accomplishing a procedure

Give insight into the reason or reasons for performing a procedure in the manner recommended

Present information that will help to accomplish a procedure in a more effective manner

Present information that gives the technician the benefit of past experience in accomplishing a procedure with greater ease

1.2. Danger

In order to reduce the chance of death, personal injury and/or property damage, carefully observe the instructions that follow:

- This service manual is intended for use by professional, qualified technicians.
- Attempting repairs or service without the appropriate training, tools, and equipment could cause death or injury to you or others.
- This could also damage the vehicle, or cause the vehicle to operate improperly.
- Proper vehicle service and repair are important to the safety of the service technician and to the safe, reliable operation of all motor vehicles.
- If you need to replace a part, use the same part number or an equivalent part. Do not use a replacement part of lesser quality.
- The service procedures we recommend and describe in this service manual are effective methods of performing service and repair.
- Procedures may include navigational link references to other service procedures. It is important to understand all necessary precautions within these procedures before starting a procedure.
- Some of the procedures require the use of tools that are designed for specific purposes.
 - These tools, especially lifting equipment and devices, should be inspected for damage, defects, wear, defective welds, deformation and increase in length.
 - If the lifting equipment and devices fail the inspection, do NOT use.
- Any person who intends to use a replacement part, a service procedure, or a tool that is not recommended by Vanderhall, must first establish that there is no jeopardy to personal safety or the safe operation of the vehicle.
- This manual contains various “Dangers”, “Warnings” and “Cautions” that you must observe carefully in order to reduce the risk of personal injury during service or repair.
- Improper service or repair may damage the vehicle or render the vehicle unsafe.
- These “Dangers”, “Warnings” and “Cautions” are not exhaustive.
- Vanderhall Motorworks cannot possibly warn of all the potentially hazardous consequences of your failure to follow these instructions.in serious injury or death.

1.3. Symbols

The Vanderhall Carmel as well as this service manual has components and labels that utilize symbols instead of text. Symbols are often shown with text describing the operation or information related to a specific component, control, message, gage, or indicator

1.3.1.1. Vehicle symbol Chart



: Air Conditioning



: Antilock Brake System (ABS)



: Brake System Warning Light



: Charging System



: Cruise Control



: Fuses



: Headlamp High/Low-Beam Changer



: Malfunction Indicator Lamp



: Oil Pressure



: Power

2020 Carmel Service Manual

General Information

 : Do Not Puncture

 : Do Not Service

 : Engine Coolant Temperature

 : Flame/Fire Prohibited

 : Fuel Gauge


 : Traction Control

 : Under Pressure

 : Windshield Washer Fluid

1.4. Vehicle VIN

This legal identifier is on the front right corner of the chassis, located between the wheel and the radiator frame. The VIN also appears on the Vehicle Certification and Service Parts labels and certificates of title and registration.

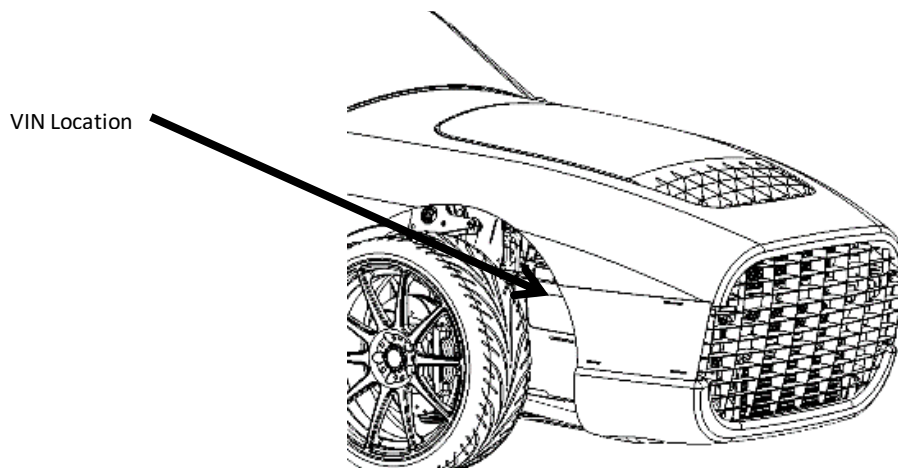

The following key can be used to identify the vehicle you are working on:

Position	1 to 3	4	5	6 to 8	9	10	11	12-17
Definition	WMI	Vehicle Type	Engine	Model	Check Digit	Model Year	Assembly Plant	Sequential Serial
Values	7KG= Vanderhall Motor Works	T= Left Hand Three Wheel Vehicle R= Right Hand Three Wheel Vehicle	V1=1.4L C2=1.5L D3=2.0L	C1=Carmel BJ C2= Carmel C3= Carmel GT C4=Carmel GTS	Checksum	K=2019 L=2020 M=2021 N=2022 P=2023	J = South Jordan, UT R = Provo, UT	000001 To 999999

2020 Carmel Service Manual

General Information

1.5. Lifting the Vehicle

Note
The use of a LOW PROFILE LIFT ARMS SYSTEM may be required to avoid unwanted contact with the vehicle's body and structure depending on lifting equipment used. Refer to the manufacture's recommendation for their applications of low profile lift arms system for their lifting equipment.

Y Danger
To avoid any vehicle damage, serious personal injury or death when major components are removed from the vehicle and the vehicle is supported by a hoist, support the vehicle with jack stands at the opposite end from which the components are being removed and strap the vehicle to the hoist.


Y Danger
To avoid any vehicle damage, serious personal injury or death, always use the jack stands to support the vehicle when lifting the vehicle with a jack.

Caution
Perform the following steps before beginning any vehicle lifting or jacking procedure: • Remove or secure all of the vehicle contents in order to avoid any shifting or any movement that may occur during the vehicle lifting or jacking procedure. • The lifting equipment or the jacking equipment weight rating must meet or exceed the weight of the vehicle and any vehicle contents. • The lifting equipment or the jacking equipment must meet the operational standards of the lifting equipment or jacking equipment manufacturer. • Perform the vehicle lifting or jacking procedure on a clean, hard, dry, level surface. • Perform the vehicle lifting or jacking procedure only at the identified lift points. DO NOT allow the lifting equipment or jacking equipment to contact any other vehicle components. ○ Failure to perform the previous steps could result in damage to the lifting equipment or the jacking equipment, the vehicle, and/or the vehicle contents.

Note
When you are lifting a vehicle with a vehicle jack or a service jack, block the wheel at the opposite end from which you are lifting and the rear if possible. Use jack stands to provide additional support.

2020 Carmel Service Manual

General Information

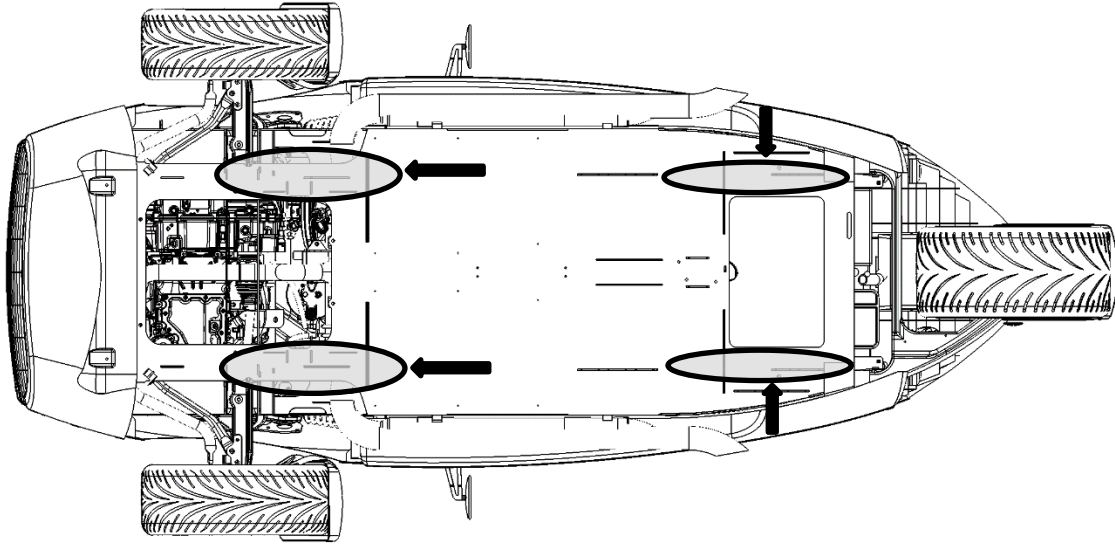

Front Lift Pads

When lifting the vehicle with a frame contact lift and/or vehicle jacking with service jack, place the front lift pads in the Areas shown

Rear Lift Pads

When lifting the vehicle with a frame contact lift and/or vehicle jacking with service jack, place the rear lift pads in the Areas shown

1.5.1. Special Tools and Equipment

There are several special tools required to service the Vanderhall Carmel. These tools are identified in specific repair sections. Tools can be purchased from Vanderhall Service.

2020 Carmel Service Manual

General Information

1.6. Maintenance and Lubrication

1.6.1. Maintenance

1.6.1.1. Maintenance Schedules

 VANDERHALL	7,500 Miles	15,000 Miles	22,500 Miles	30,000 Miles	37,500 Miles	45,000 Miles	52,500 Miles	60,000 Miles	67,500 Miles	75,000 Miles	82,500 Miles	90,000 Miles	97,500 Miles	105,000 Miles	120,000 Miles	127,500 Miles	135,000 Miles	142,500 Miles	150,000 Miles
Check engine oil level and oil life percentage. Change engine oil and filter, if needed.	?	?	?	?	?	?	?	?	?	?	?	?	?	?	?	?	?	?	?
Clean or Replace engine air cleaner filter (or every 4 years, whichever occurs first).				?				?				?			?				?
Replace spark plugs								?							?				
Change automatic transmission fluid.												?					?		
Change brake fluid (or every 3 years, whichever occurs first)						?						?					?		
Drain and fill engine cooling system (or every 5 years, whichever comes first).																			?
Inspect evaporative control system						?						?					?		
Inspect engine accessory drive belts for fraying, excessive cracks or obvious damage (or every 10 years, whichever occurs first)																			?

2020 Carmel Service Manual

General Information

1.6.2. Specifications

1.6.2.1. Approximate Fluid Capacities

Application	Specification	
	Metric	English
Cooling System	6.5 L	6.9 qt
Engine Oil with Filter	4.0 L	4.2 qt
Fuel Tank	35 L	9 Gal