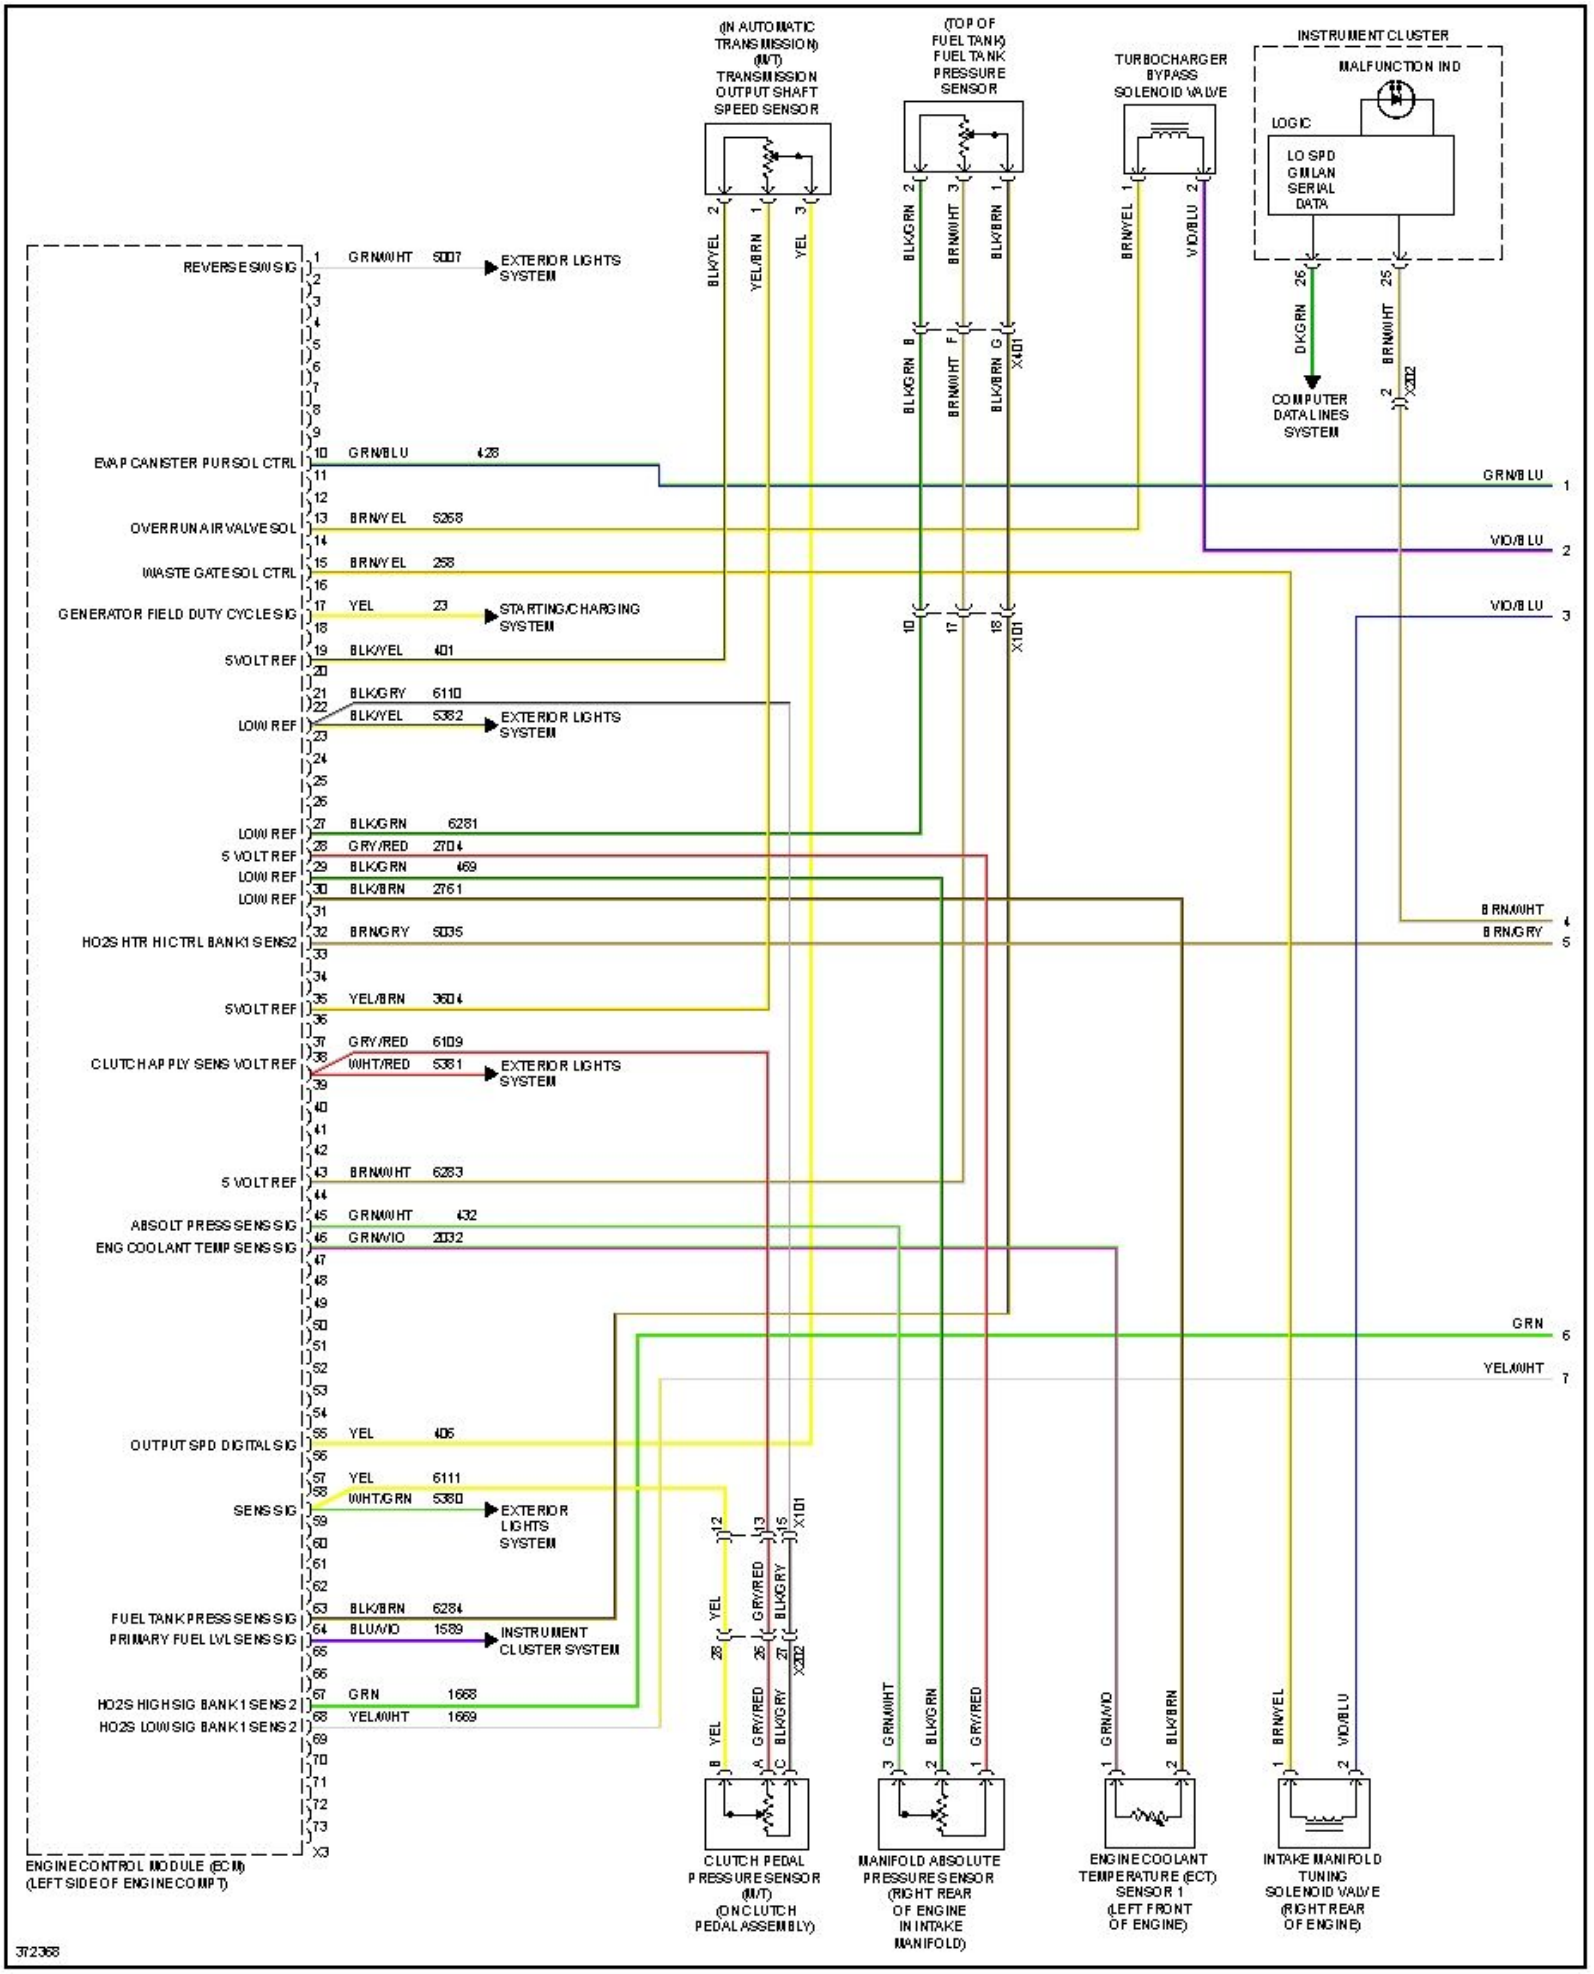
(IN AUTOMATIC TRANSMISSION) (M/T) TRANSMISSION OUTPUT SHAFT SPEED SENSOR
(TOP OF FUEL TANK) FUEL TANK PRESSURE SENSOR
TURBOCHARGER BYPASS SOLENOID VALVE
INSTRUMENT CLUSTER
MALFUNCTION IND
LOGIC
LO SPD GMLAN SERIAL DATA
COMPUTER DATA LINES SYSTEM
REVERSE SW SIG
EVAP CANISTER PURSOL CTRL
OVERRUN AIR VALVE SOL
WASTE GATE SOL CTRL
GENERATOR FIELD DUTY CYCLE SIG
5 VOLT REF
LOW REF
HO2S HTR HI CTRL BANK1 SENS2
CLUTCH APPLY SENS VOLT REF
ABSOLT PRESS SENS SIG
ENG COOLANT TEMP SENS SIG
OUTPUT SPD DIGITAL SIG
SENS SIG
FUEL TANK PRESS SENS SIG
PRIMARY FUEL LVL SENS SIG
HO2S HIGH SIG BANK1 SENS2
HO2S LOW SIG BANK1 SENS2
EXTERIOR LIGHTS SYSTEM
STARTING/CHARGING SYSTEM
INSTRUMENT CLUSTER SYSTEM
EXTERIOR LIGHTS SYSTEM
EXTERIOR LIGHTS SYSTEM
EXTERIOR LIGHTS SYSTEM
COMPUTER DATA LINES SYSTEM
ENGINE CONTROL MODULE (ECM) (LEFT SIDE OF ENGINE COMPT)
CLUTCH PEDAL PRESSURE SENSOR (M/T) (ON CLUTCH PEDAL ASSEMBLY)
MANIFOLD ABSOLUTE PRESSURE SENSOR (RIGHT REAR OF ENGINE IN INTAKE MANIFOLD)
ENGINE COOLANT TEMPERATURE (ECT) SENSOR 1 (LEFT FRONT OF ENGINE)
INTAKE MANIFOLD TUNING SOLENOID VALVE (RIGHT REAR OF ENGINE)
372368