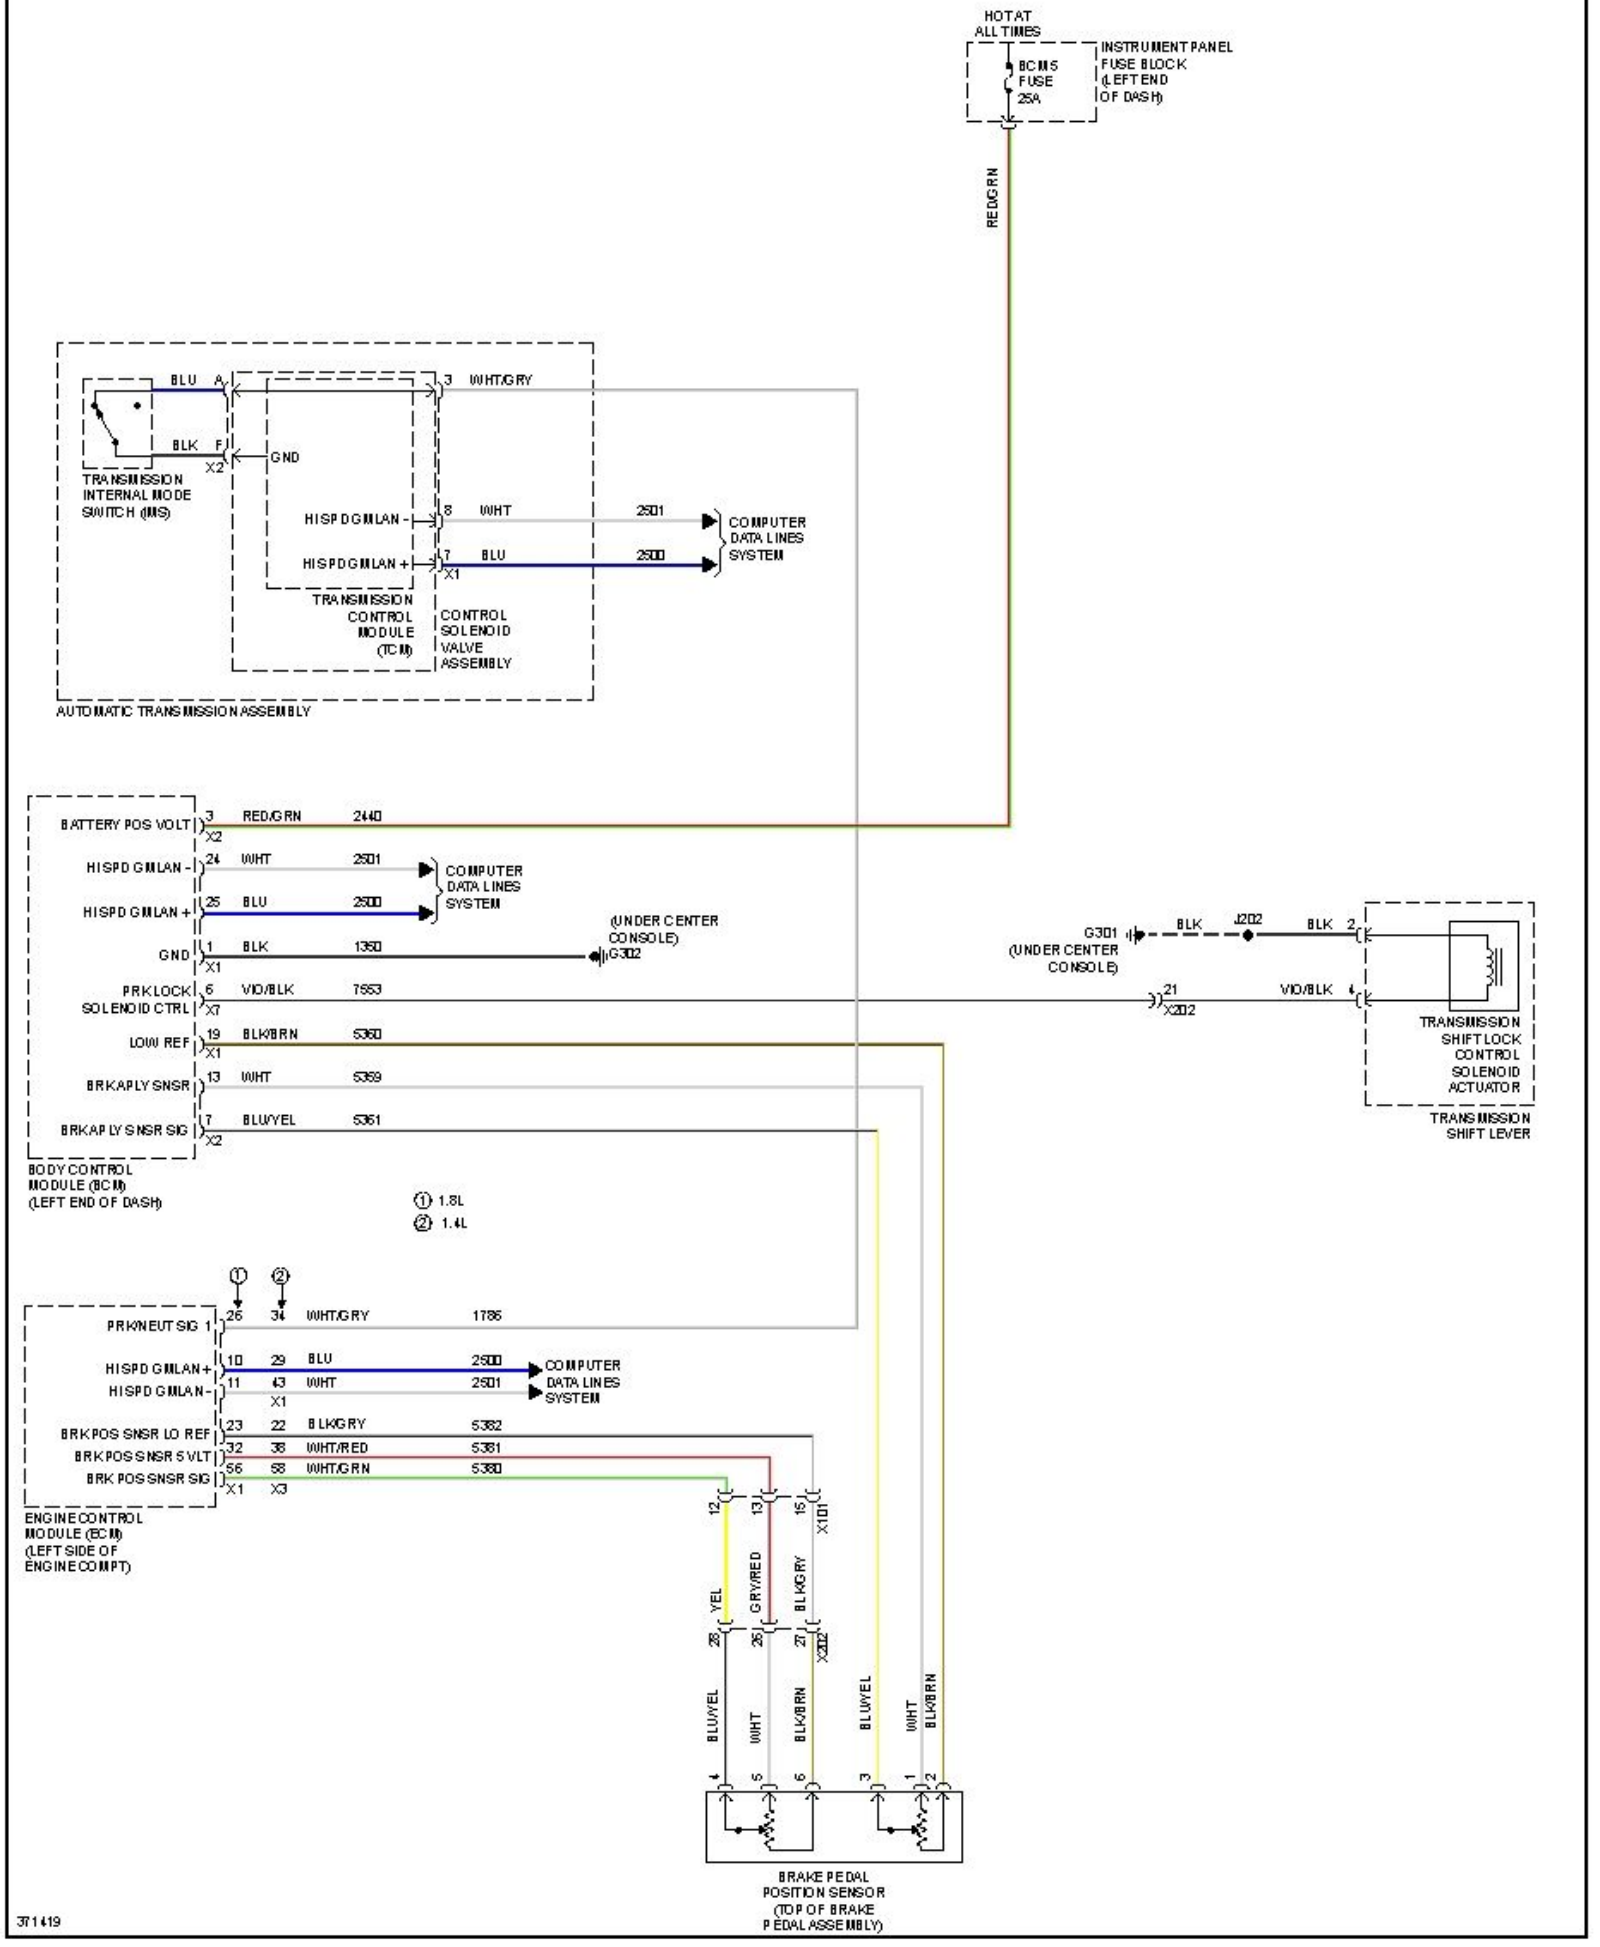
HOT AT ALL TIMES
BCMS FUSE 25A
INSTRUMENT PANEL FUSE BLOCK (LEFT END OF DASH)
RED/GRN
BLU A
BLK F
X2
GND
TRANSMISSION INTERNAL MODE SWITCH (IMS)
3 WHT/GRY
HISPD GMLAN -
8 WHT
2501
HISPD GMLAN +
7 BLU
2500
X1
COMPUTER DATA LINES SYSTEM
TRANSMISSION CONTROL MODULE (TCM)
CONTROL SOLENOID VALVE ASSEMBLY
AUTOMATIC TRANSMISSION ASSEMBLY
BATTERY POS VOLT
3 RED/GRN 2440
X2
HISPD GMLAN -
24 WHT 2501
HISPD GMLAN +
25 BLU 2500
COMPUTER DATA LINES SYSTEM
GND
1 BLK 1350
X1
(UNDER CENTER CONSOLE) G302
PRK LOCK SOLENOID CTRL
6 VIO/BLK 7553
X1
LOW REF
19 BLK/BRN 5360
X1
BRK APLY SNSR
13 WHT 5359
BRK APLY SNSR SIG
7 BLU/YEL 5361
X2
BODY CONTROL MODULE (BCM) (LEFT END OF DASH)
G301 (UNDER CENTER CONSOLE)
BLK J202 BLK 2
21 X202 VIO/BLK 4
TRANSMISSION SHIFT LOCK CONTROL SOLENOID ACTUATOR
TRANSMISSION SHIFT LEVER
① 1.8L
② 1.4L
PRK/NEUT SIG 1
26 34 WHT/GRY 1786
HISPD GMLAN+
10 29 BLU 2500
HISPD GMLAN-
11 43 WHT 2501
X1
COMPUTER DATA LINES SYSTEM
BRK POS SNSR LO REF
23 22 BLK/GRY 5382
BRK POS SNSR 5 VLT
32 38 WHT/RED 5381
BRK POS SNSR SIG
56 58 WHT/GRN 5380
X1 X3
ENGINE CONTROL MODULE (ECM) (LEFT SIDE OF ENGINE COMPT)
12 13 15 X101
YEL GRY/RED BLK/GRY
28 26 27 X202
BLU/YEL WHT BLK/BRN BLU/YEL WHT BLK/BRN
4 5 6 3 1 2
BRAKE PEDAL POSITION SENSOR (TOP OF BRAKE PEDAL ASSEMBLY)
371419