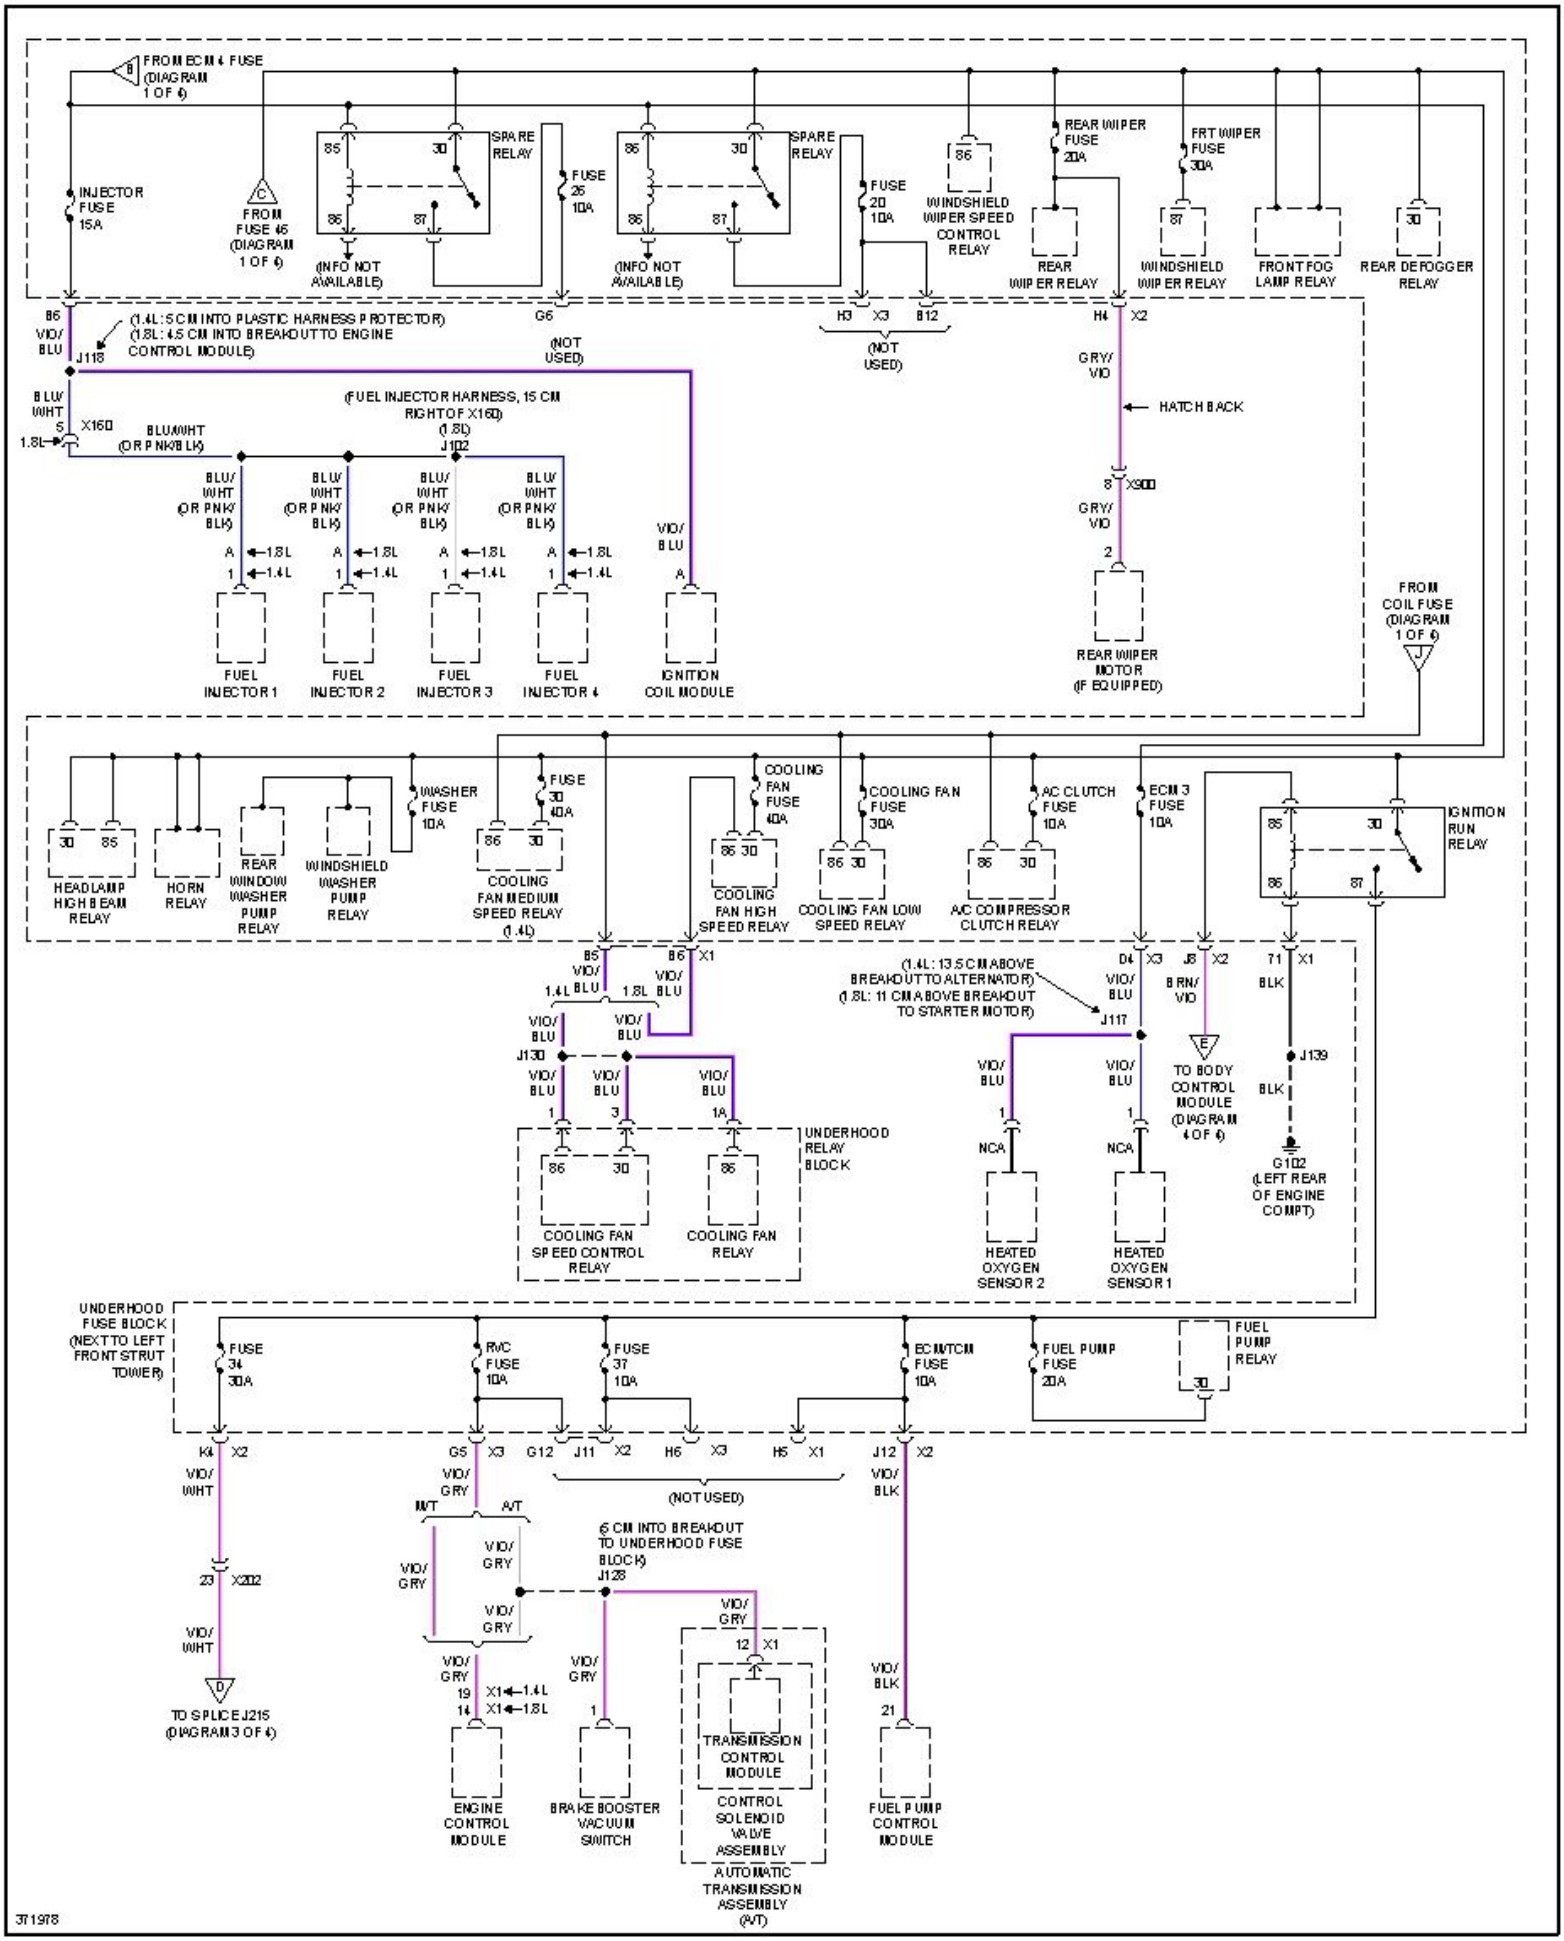
FROM ECM 4 FUSE (DIAGRAM 1 OF 4)
INJECTOR FUSE 15A
FROM FUSE 45 (DIAGRAM 1 OF 4)
SPARE RELAY
(INFO NOT AVAILABLE)
FUSE 25 10A
SPARE RELAY
(INFO NOT AVAILABLE)
FUSE 20 10A
WINDSHIELD WIPER SPEED CONTROL RELAY
REAR WIPER FUSE 20A
FRT WIPER FUSE 30A
REAR WIPER RELAY
WINDSHIELD WIPER RELAY
FRONT FOG LAMP RELAY
REAR DEFOGGER RELAY
B6 VIO/BLU
(1.4L: 5 CM INTO PLASTIC HARNESS PROTECTOR)
(1.8L: 4.5 CM INTO BREAKOUT TO ENGINE CONTROL MODULE)
J118
G6
(NOT USED)
H3 X3 B12
(NOT USED)
H4 X2
GRY/VIO
HATCH BACK
BLU/WHT 5 X160 1.8L
BLU/WHT (OR PNK/BLK)
(FUEL INJECTOR HARNESS, 15 CM RIGHT OF X160) (1.8L) J102
BLU/WHT (OR PNK/BLK)
VIO/BLU
8 X900
GRY/VIO
2
FUEL INJECTOR 1
FUEL INJECTOR 2
FUEL INJECTOR 3
FUEL INJECTOR 4
IGNITION COIL MODULE
REAR WIPER MOTOR (IF EQUIPPED)
FROM COIL FUSE (DIAGRAM 1 OF 4)
HEADLAMP HIGH BEAM RELAY
HORN RELAY
REAR WINDOW WASHER PUMP RELAY
WINDSHIELD WASHER PUMP RELAY
WASHER FUSE 10A
FUSE 30 40A
COOLING FAN MEDIUM SPEED RELAY (1.4L)
COOLING FAN FUSE 40A
COOLING FAN HIGH SPEED RELAY
COOLING FAN FUSE 30A
COOLING FAN LOW SPEED RELAY
AC CLUTCH FUSE 10A
AC COMPRESSOR CLUTCH RELAY
ECM 3 FUSE 10A
IGNITION RUN RELAY
B5 VIO/1.4L BLU
B6 VIO/1.8L BLU
VIO/BLU
J130
(1.4L: 13.5 CM ABOVE BREAKOUT TO ALTERNATOR) (1.8L: 11 CM ABOVE BREAKOUT TO STARTER MOTOR)
J117
D4 X3 VIO/BLU
J8 X2 BRN/VIO
71 X1 BLK
J139
G102 (LEFT REAR OF ENGINE COMPT)
TO BODY CONTROL MODULE (DIAGRAM 4 OF 4)
UNDERHOOD RELAY BLOCK
COOLING FAN SPEED CONTROL RELAY
COOLING FAN RELAY
NCA
HEATED OXYGEN SENSOR 2
HEATED OXYGEN SENSOR 1
UNDERHOOD FUSE BLOCK (NEXT TO LEFT FRONT STRUT TOWER)
FUSE 34 30A
RVC FUSE 10A
FUSE 37 10A
ECM/TCM FUSE 10A
FUEL PUMP FUSE 20A
FUEL PUMP RELAY
K4 X2 VIO/WHT
G5 X3 VIO/GRY
G12 J11 X2
H6 X3
H5 X1
J12 X2 VIO/BLK
(NOT USED)
M/T
A/T
6 CM INTO BREAKOUT TO UNDERHOOD FUSE BLOCK) J128
23 X202
TO SPLICE J215 (DIAGRAM 3 OF 4)
19 X1 1.4L
14 X1 1.8L
12 X1
21
ENGINE CONTROL MODULE
BRAKE BOOSTER VACUUM SWITCH
TRANSMISSION CONTROL MODULE
CONTROL SOLENOID VALVE ASSEMBLY
AUTOMATIC TRANSMISSION ASSEMBLY (A/T)
FUEL PUMP CONTROL MODULE
371978