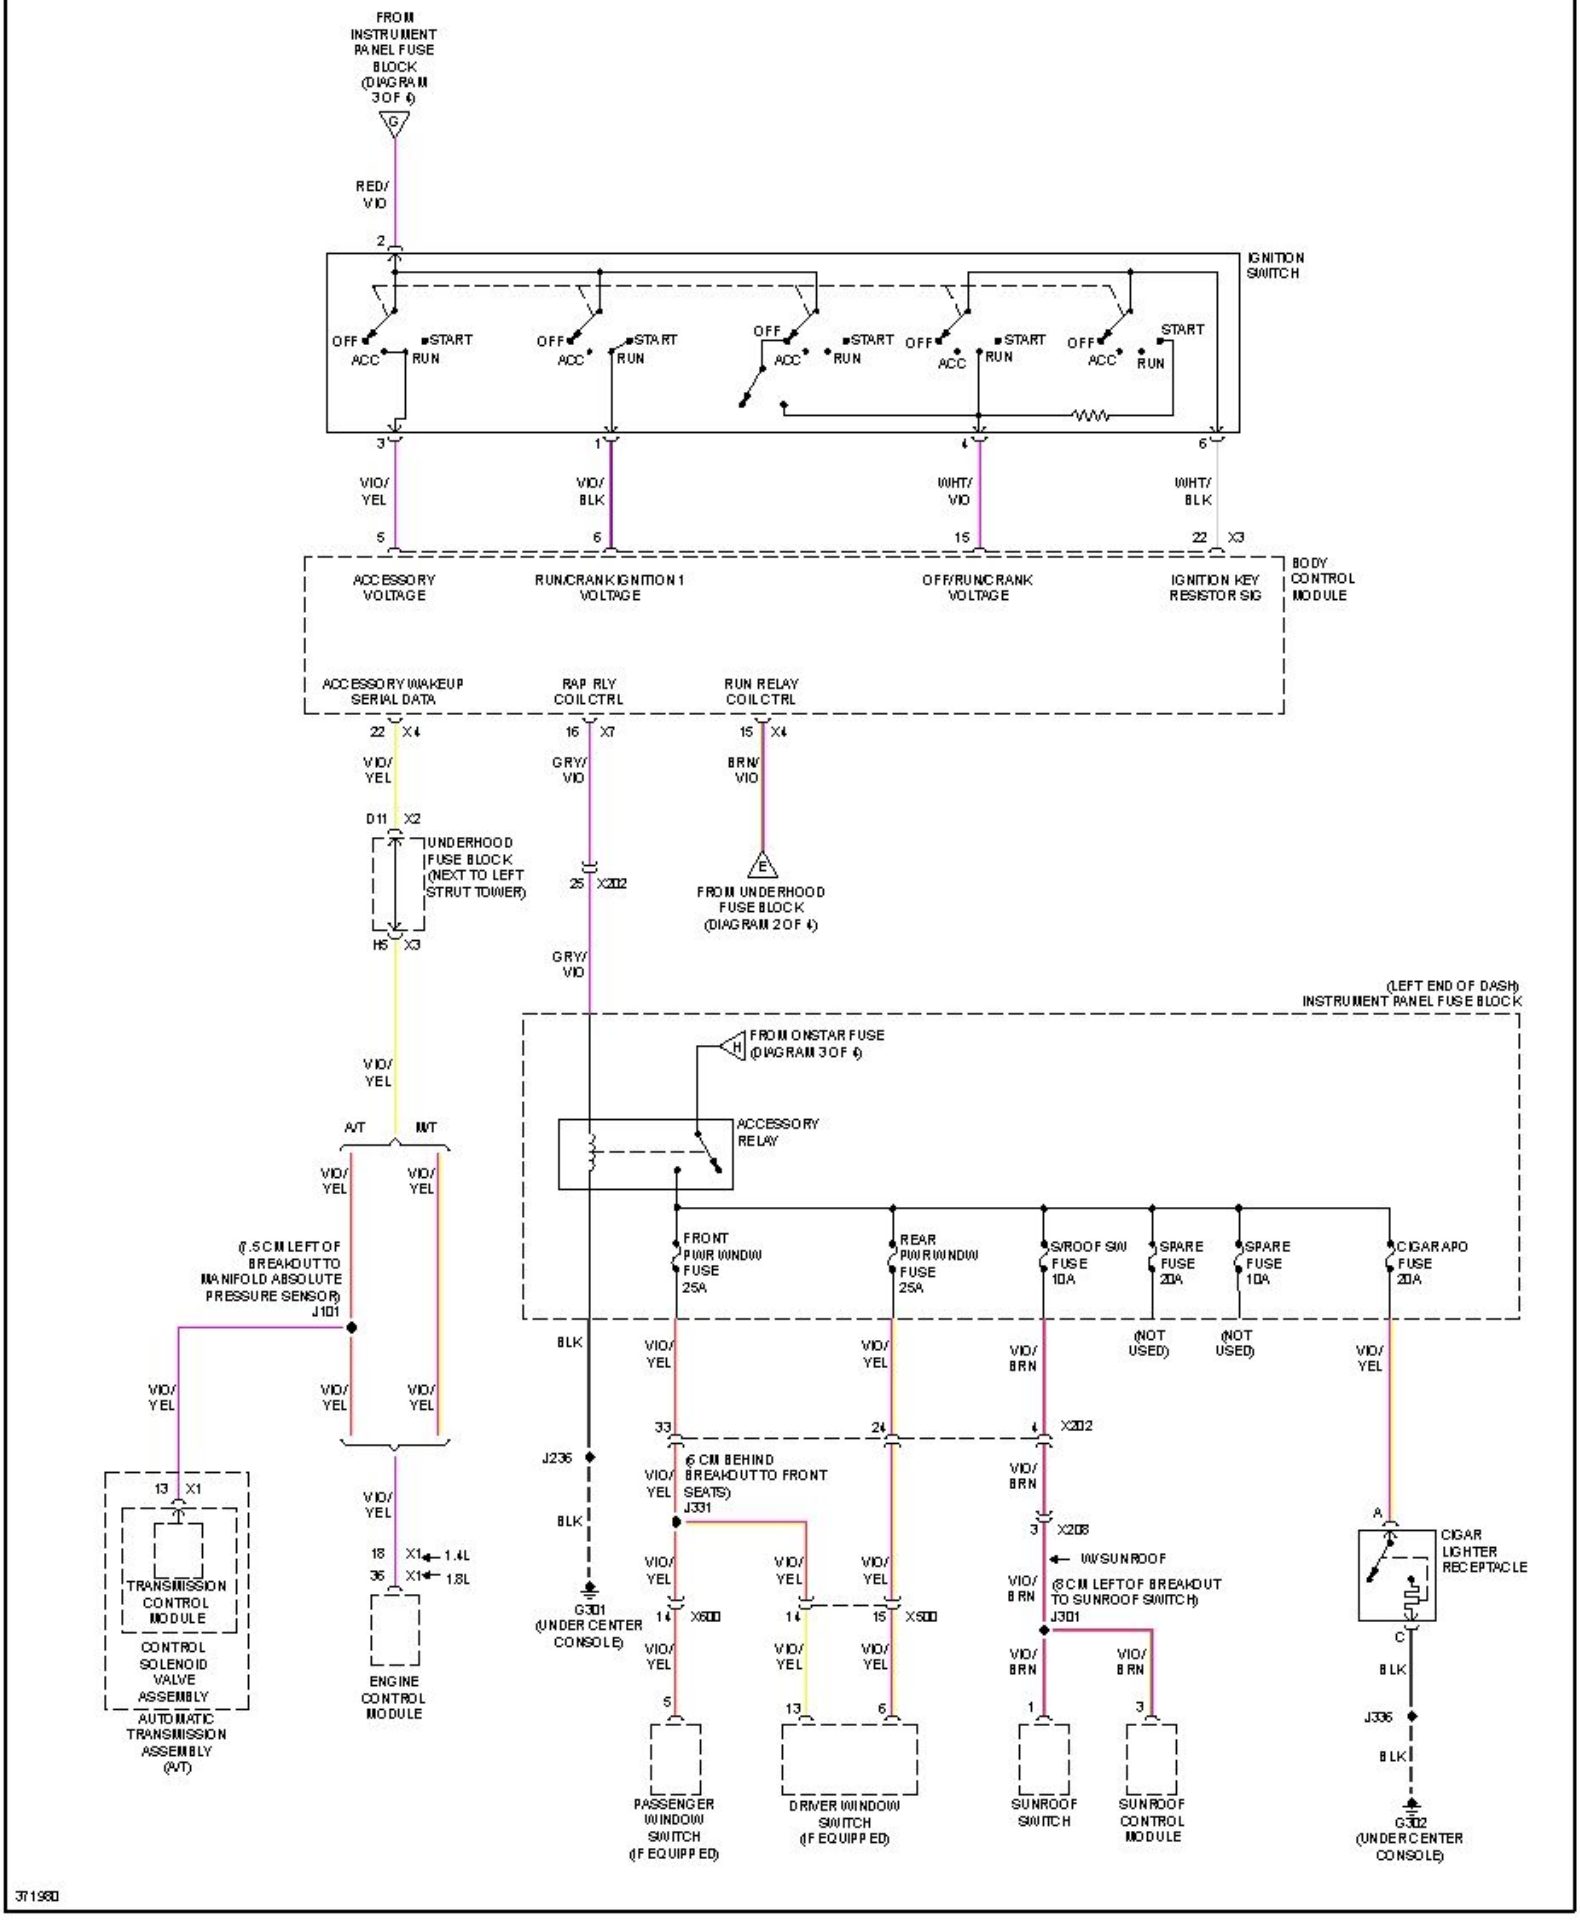
FROM INSTRUMENT PANEL FUSE BLOCK (DIAGRAM 3 OF 4)
G
RED/ VIO
2
IGNITION SWITCH
OFF
ACC
START
RUN
3
1
4
6
VIO/ YEL
VIO/ BLK
WHT/ VIO
WHT/ BLK
5
6
15
22
X3
BODY CONTROL MODULE
ACCESSORY VOLTAGE
RUN/CRANK IGNITION 1 VOLTAGE
OFF/RUN/CRANK VOLTAGE
IGNITION KEY RESISTOR SIG
ACCESSORY WAKEUP SERIAL DATA
RAP RLY COIL CTRL
RUN RELAY COIL CTRL
22
X4
16
X7
15
X4
VIO/ YEL
GRY/ VIO
BRN/ VIO
D11
X2
UNDERHOOD FUSE BLOCK (NEXT TO LEFT STRUT TOWER)
H5
X3
25
X202
E
FROM UNDERHOOD FUSE BLOCK (DIAGRAM 2 OF 4)
GRY/ VIO
(LEFT END OF DASH) INSTRUMENT PANEL FUSE BLOCK
H
FROM ONSTAR FUSE (DIAGRAM 3 OF 4)
ACCESSORY RELAY
VIO/ YEL
A/T
M/T
FRONT PWR WNDW FUSE 25A
REAR PWR WNDW FUSE 25A
S/ROOF SW FUSE 10A
SPARE FUSE 20A
SPARE FUSE 10A
CIGAR APO FUSE 20A
(NOT USED)
(NOT USED)
(.5 CM LEFT OF BREAKOUT TO MANIFOLD ABSOLUTE PRESSURE SENSOR) J101
BLK
VIO/ BRN
33
24
4
X202
J236
(6 CM BEHIND BREAKOUT TO FRONT SEATS) J331
13
X1
TRANSMISSION CONTROL MODULE
CONTROL SOLENOID VALVE ASSEMBLY
AUTOMATIC TRANSMISSION ASSEMBLY (A/T)
18
X1
1.4L
36
X1
1.8L
ENGINE CONTROL MODULE
G301 (UNDER CENTER CONSOLE)
14
X600
15
X500
5
13
6
1
3
PASSENGER WINDOW SWITCH (IF EQUIPPED)
DRIVER WINDOW SWITCH (IF EQUIPPED)
SUNROOF SWITCH
SUNROOF CONTROL MODULE
W/SUNROOF
(6 CM LEFT OF BREAKOUT TO SUNROOF SWITCH) J301
A
CIGAR LIGHTER RECEPTACLE
C
BLK
J336
G302 (UNDER CENTER CONSOLE)
371980