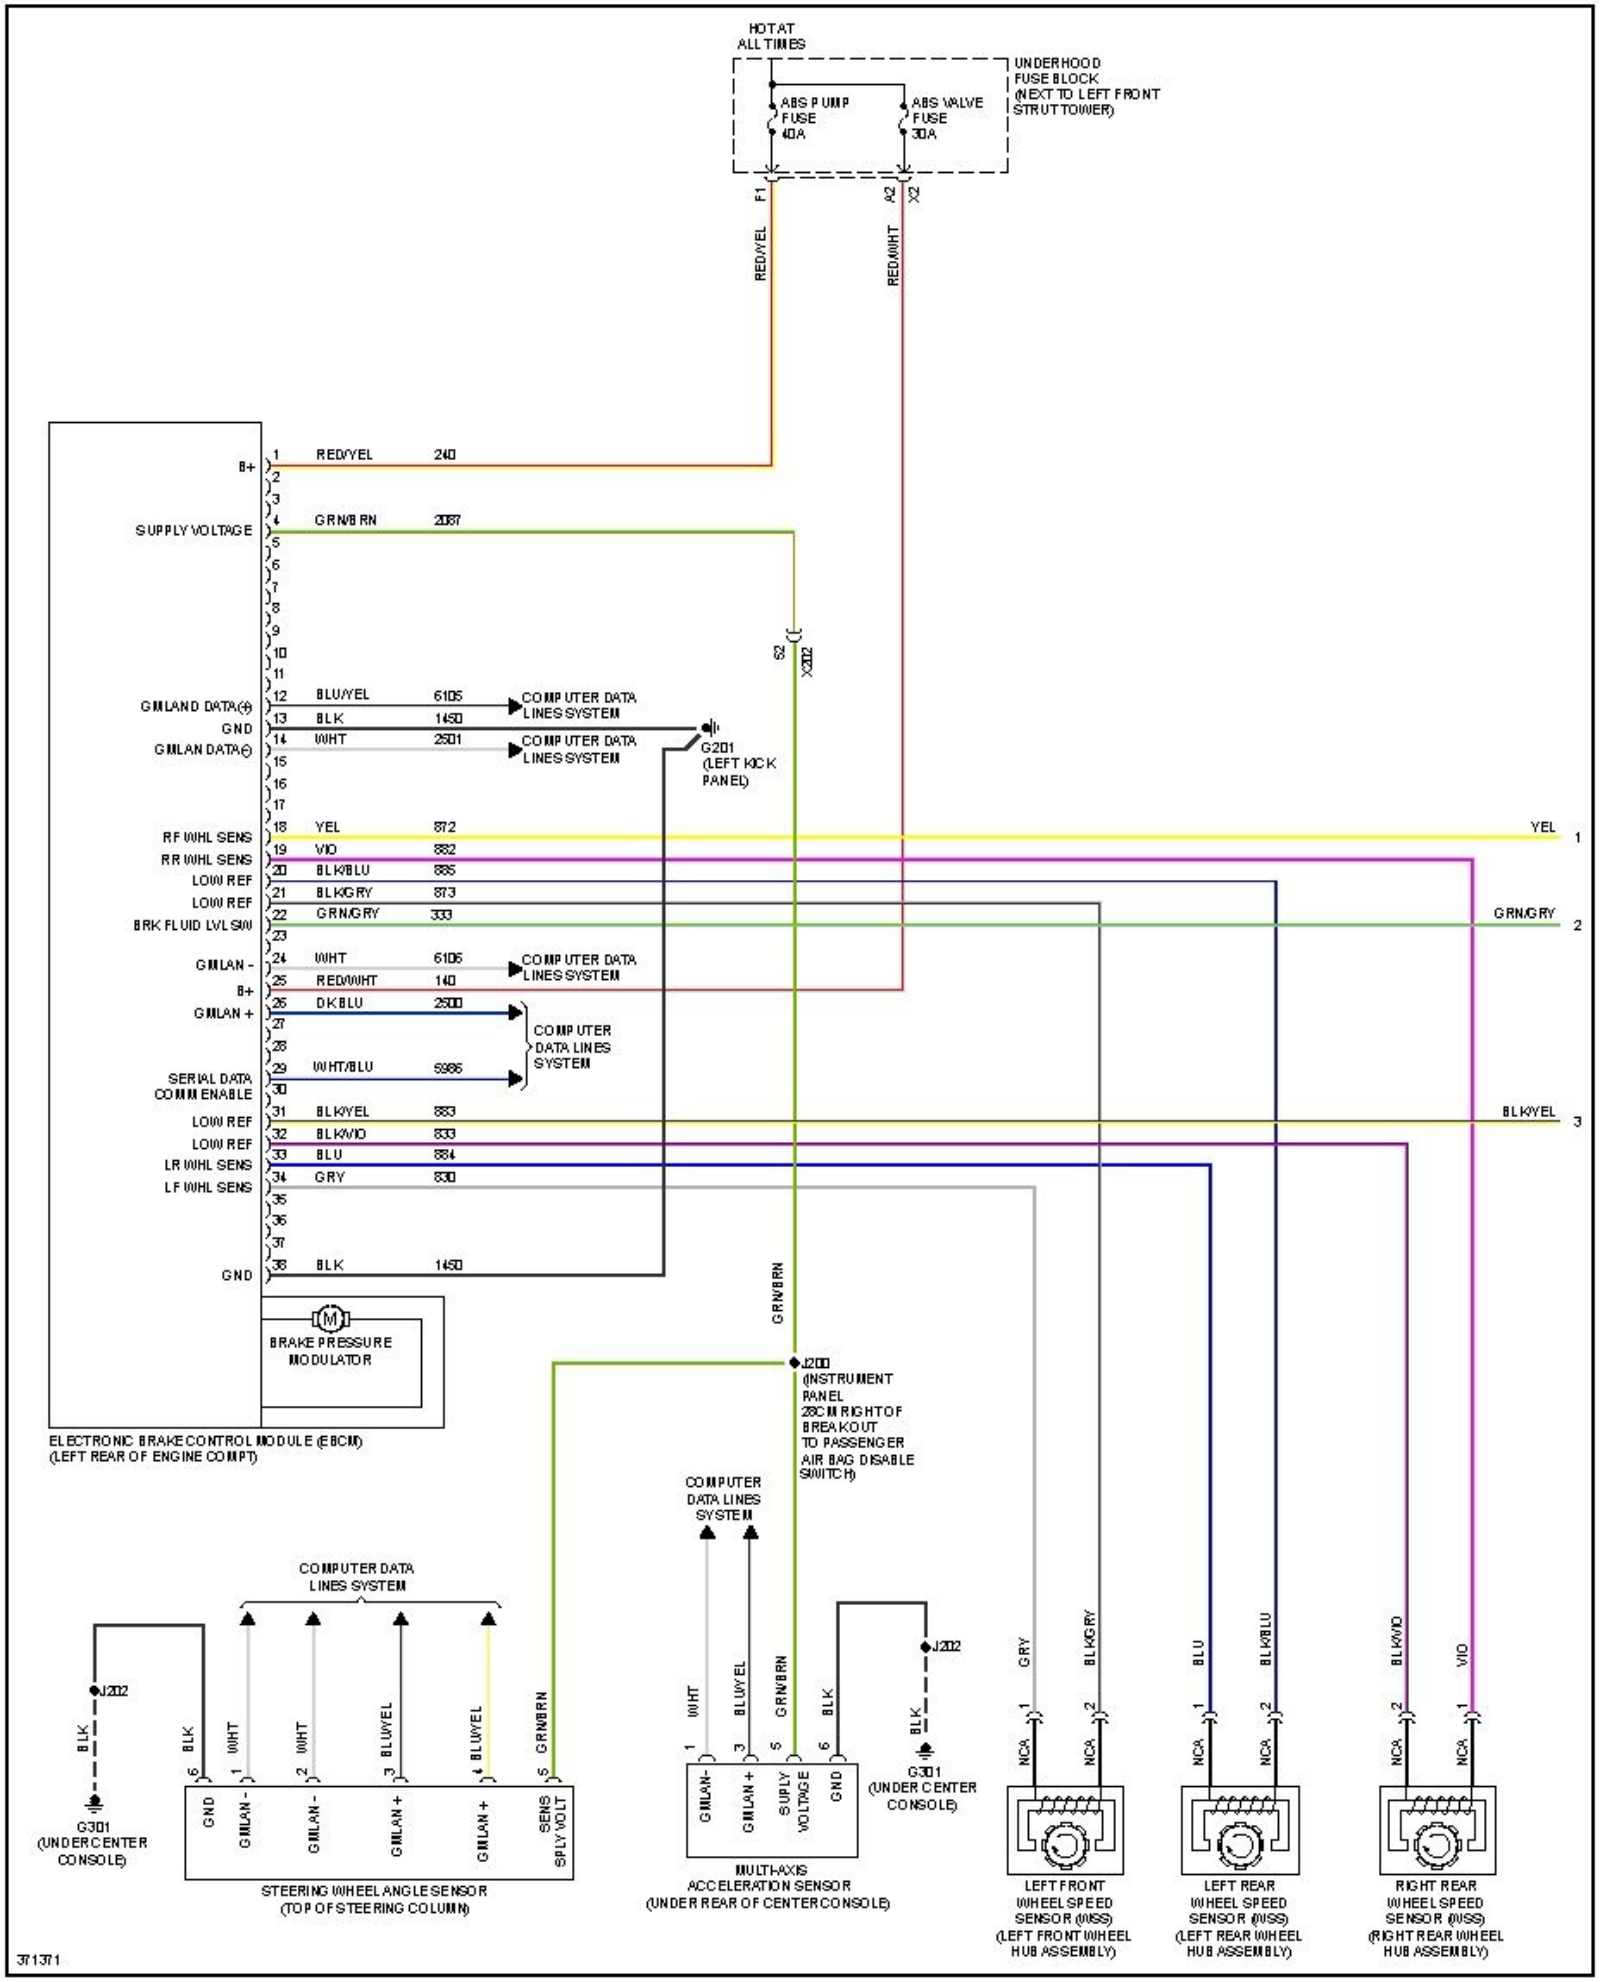
HOT AT ALL TIMES
UNDER HOOD FUSE BLOCK (NEXT TO LEFT FRONT STRUT TOWER)
ABS PUMP FUSE 40A
ABS VALVE FUSE 30A
F1
A2
X2
RED/YEL
RED/WHT
B+
SUPPLY VOLTAGE
GMLAN DATA(+)
GND
GMLAN DATA(-)
RF WHL SENS
RR WHL SENS
LOW REF
LOW REF
BRK FLUID LVL SW
GMLAN -
B+
GMLAN +
SERIAL DATA COMM ENABLE
LOW REF
LOW REF
LR WHL SENS
LF WHL SENS
GND
1 RED/YEL 240
4 GRN/BRN 2087
12 BLU/YEL 6105
13 BLK 1450
14 WHT 2501
18 YEL 872
19 VIO 882
20 BLK/BLU 885
21 BLK/GRY 873
22 GRN/GRY 333
24 WHT 6105
25 RED/WHT 140
26 DK BLU 2500
29 WHT/BLU 5986
31 BLK/YEL 883
32 BLK/VIO 833
33 BLU 884
34 GRY 830
38 BLK 1450
COMPUTER DATA LINES SYSTEM
G201 (LEFT KICK PANEL)
S2
X202
YEL
GRN/GRY
BLK/YEL
BRAKE PRESSURE MODULATOR
ELECTRONIC BRAKE CONTROL MODULE (EBCM) (LEFT REAR OF ENGINE COMPT)
J200 (INSTRUMENT PANEL 28CM RIGHT OF BREAKOUT TO PASSENGER AIR BAG DISABLE SWITCH)
COMPUTER DATA LINES SYSTEM
J202
BLK
G301 (UNDER CENTER CONSOLE)
GND
GMLAN -
GMLAN -
GMLAN +
GMLAN +
SENS SPLY VOLT
WHT
WHT
BLU/YEL
BLU/YEL
GRN/BRN
STEERING WHEEL ANGLE SENSOR (TOP OF STEERING COLUMN)
GMLAN-
GMLAN +
SUPLY VOLTAGE
GND
MULTI-AXIS ACCELERATION SENSOR (UNDER REAR OF CENTER CONSOLE)
GRY
BLK/GRY
BLU
BLK/BLU
BLK/VIO
VIO
NCA
LEFT FRONT WHEEL SPEED SENSOR (WSS) (LEFT FRONT WHEEL HUB ASSEMBLY)
LEFT REAR WHEEL SPEED SENSOR (WSS) (LEFT REAR WHEEL HUB ASSEMBLY)
RIGHT REAR WHEEL SPEED SENSOR (WSS) (RIGHT REAR WHEEL HUB ASSEMBLY)
371371